




UNIONE

User Manual

PRODUCT STRUCTURE

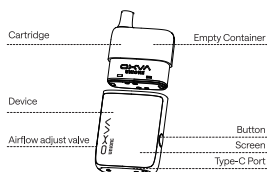

SPECIFICATIONS

Size:	97,5mm*46,5mm*22mm
Cartridge Capacity:	10ml
Battery Type:	Built-in 1100mAh
Charging:	Type-C 5V/1A

1. INSTRUCTIONS

1) Fill the E-liquid into the container.



- * After filling the E-liquid, please close as soon as possible to avoid leaking.
- * Refill the 2ml cartridge from the container once the E-liquid is nearly used up.
- * After filling the E-liquid into a new pod, please wait for at least 1-2 minutes before vaping to avoid dry burning.

2) Put the cartridge into the device and start to vape.



- English 1 -

- 3) Press the button x2 time in 2s to adjust your preferred mode.
- 4) Push the airflow valve up/down to adjust your preferred airflow.
- 5) Press the button x5 times in 2s to turn off/on the device.

2. SCREEN PROMPTS

SHORT CIRCUIT: The short-circuit is detected and the whole screen flashes 3 times.

OPEN CIRCUIT: The POD is not detected and the whole screen flashes 3 times.

OVER 8S: The vaping time is over 8s and ECO&BOOST flashes 3 times.

LOW BATTERY: The battery is low and the ⚡ flashes 10 times.

ATTENTION

- * Please keep away from inflammable and explosive materials to avoid injury.
- * Please don't leave the device unattended while charging.
- * Please use OXVA brand components and accessories to avoid device damage or health problems.

- English 2 -

WARRANTY POLICY

Thank you for purchasing OXVA products. OXVA will fulfill the following terms and conditions in order to offer the original buyer with repair or replacement under warranty:

1. The warranty covers defects in materials or workmanship under normal use for 90 days from the purchase date. The warranty covers the repair or replacement of any damaged parts.
2. This warranty may be disqualified as a result of the following circumstances:
 - * The customer does not give this warranty card or the original receipt for purchase.
 - * Merchandise failure or damage is caused by improper use or unauthorized adjustments.
 - * Merchandise failure or damage caused by extreme force or impact, as well as operating conditions that are not recommended. See the user handbook for details.
 - * Merchandise failure or damage caused by exposure to water or other conducting liquids.
 - * Merchandise failure or damage caused by using non-OXVA brand accessories.
3. This warranty does not cover personal or consumable items like coil heads, USB cables, and mouthpieces.

For more information please visit our website at www.oxva.com
Or email us at support@oxva.com

PURCHASE INFORMATION

Product Model: _____

Date of Purchase (Based on the date from receipt of purchase):

Day: _____

Month: _____

Year: _____

Store Information:

Store Name: _____

Phone: _____

Store Address: _____

City: _____

Country: _____

Post Code: _____

Customer Information:

Customer Name: _____

Phone: _____

Customer Address:

City: _____

Country: _____

Post Code: _____



Scan to
Discover OXVA

UNIONE